


# Mini-Marquees

## INSTRUCTIONS FOR REPLACING SPRING CLIPS

(The large spring clip = Outer Leg)  
 (The small spring clip = Inner Leg)


INNER LEG: 1. Remove the inner leg from the outer leg

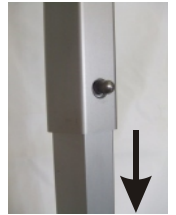

2. Using a long piece of tubing or similar, push the old spring clip down the inner leg away from the hole.




3. Take the new inner leg spring clip and push it down the leg until the button pops out of the hole

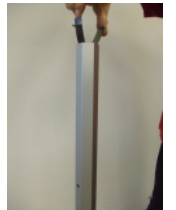


4. Replace the inner leg back into the outer leg.

OUTER LEG: A. Remove the inner leg from the outer leg

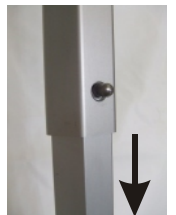

B. Using a long piece of tubing or similar push the old spring clip up the outer leg away from the hole.

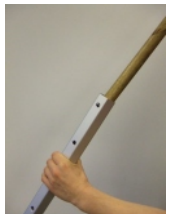

C. Take the new outer leg spring clip and push it up the leg until the button pops out of the hole nearest the Top Bracket on the leg.

D. Replace the inner leg back into the outer leg.

